

FIG. 1

2/23

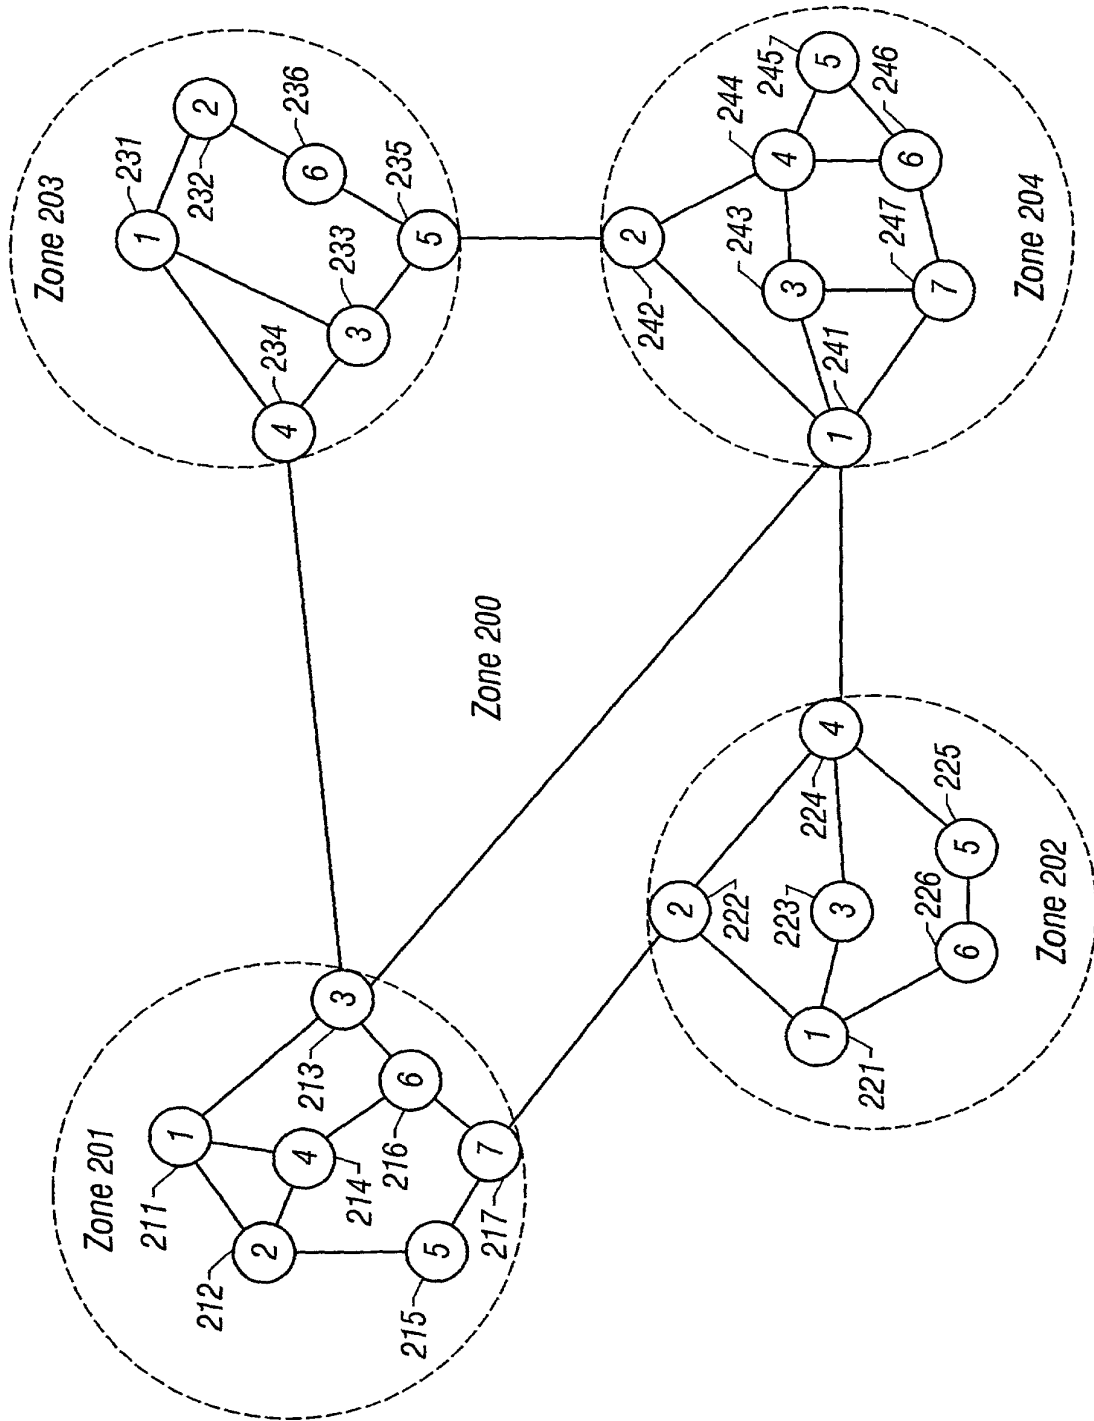


FIG. 2

3/23

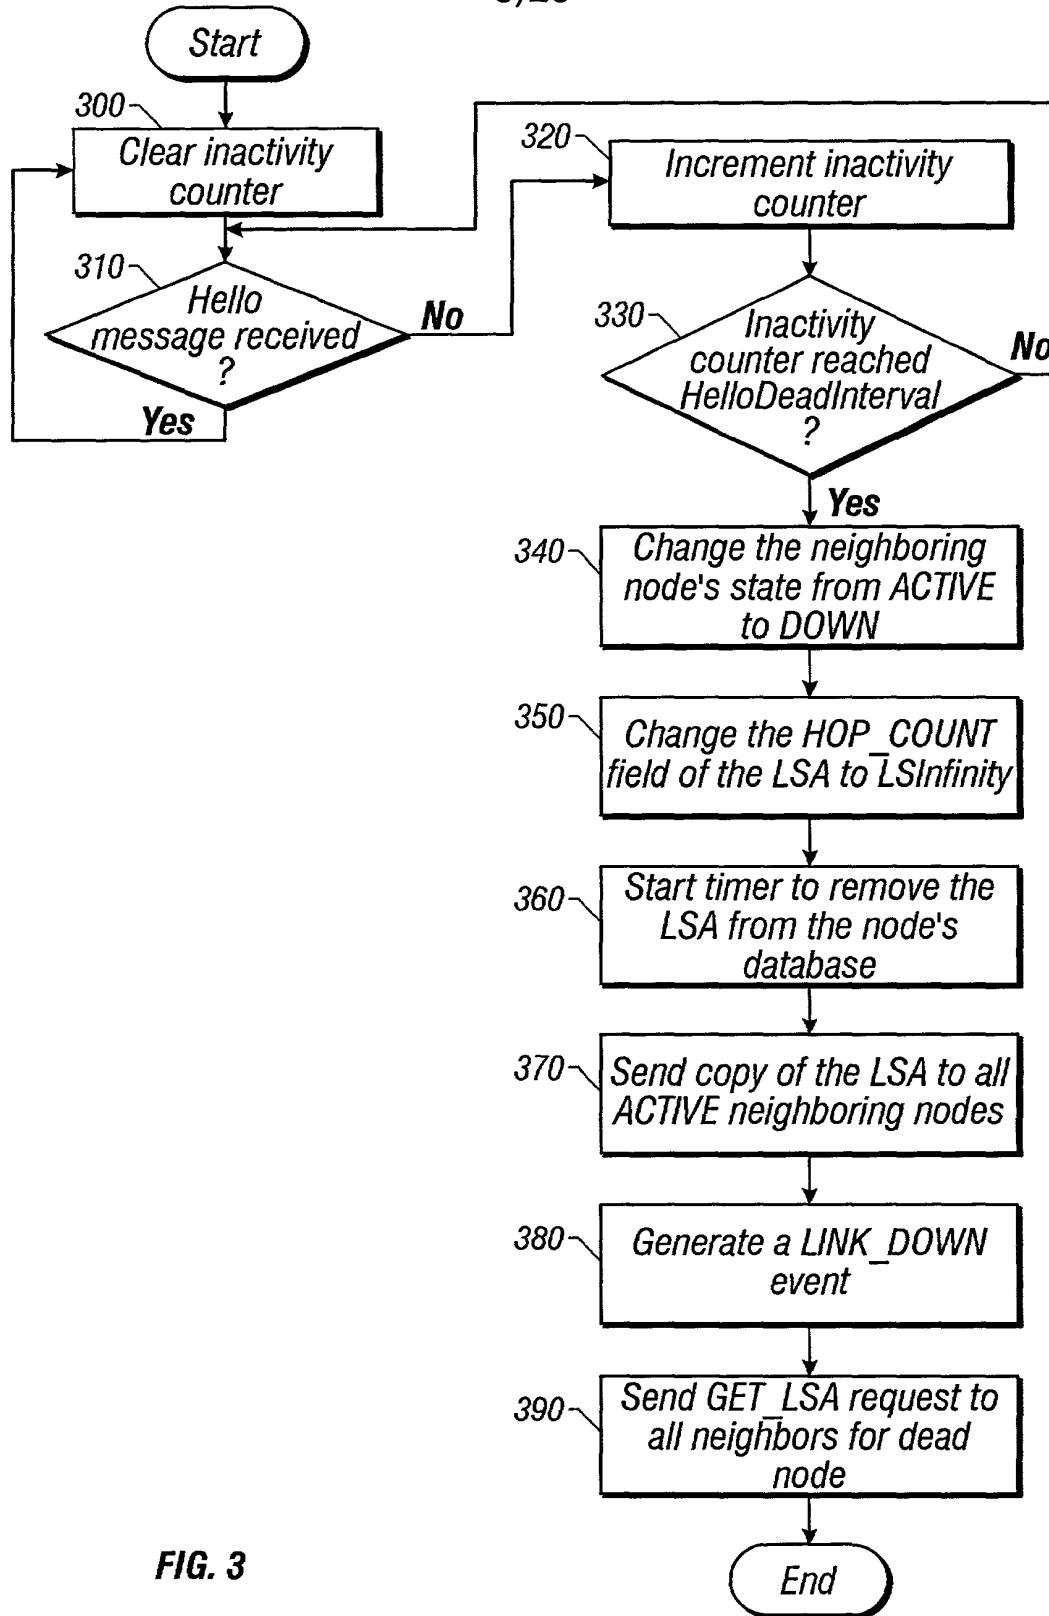


FIG. 3

4/23

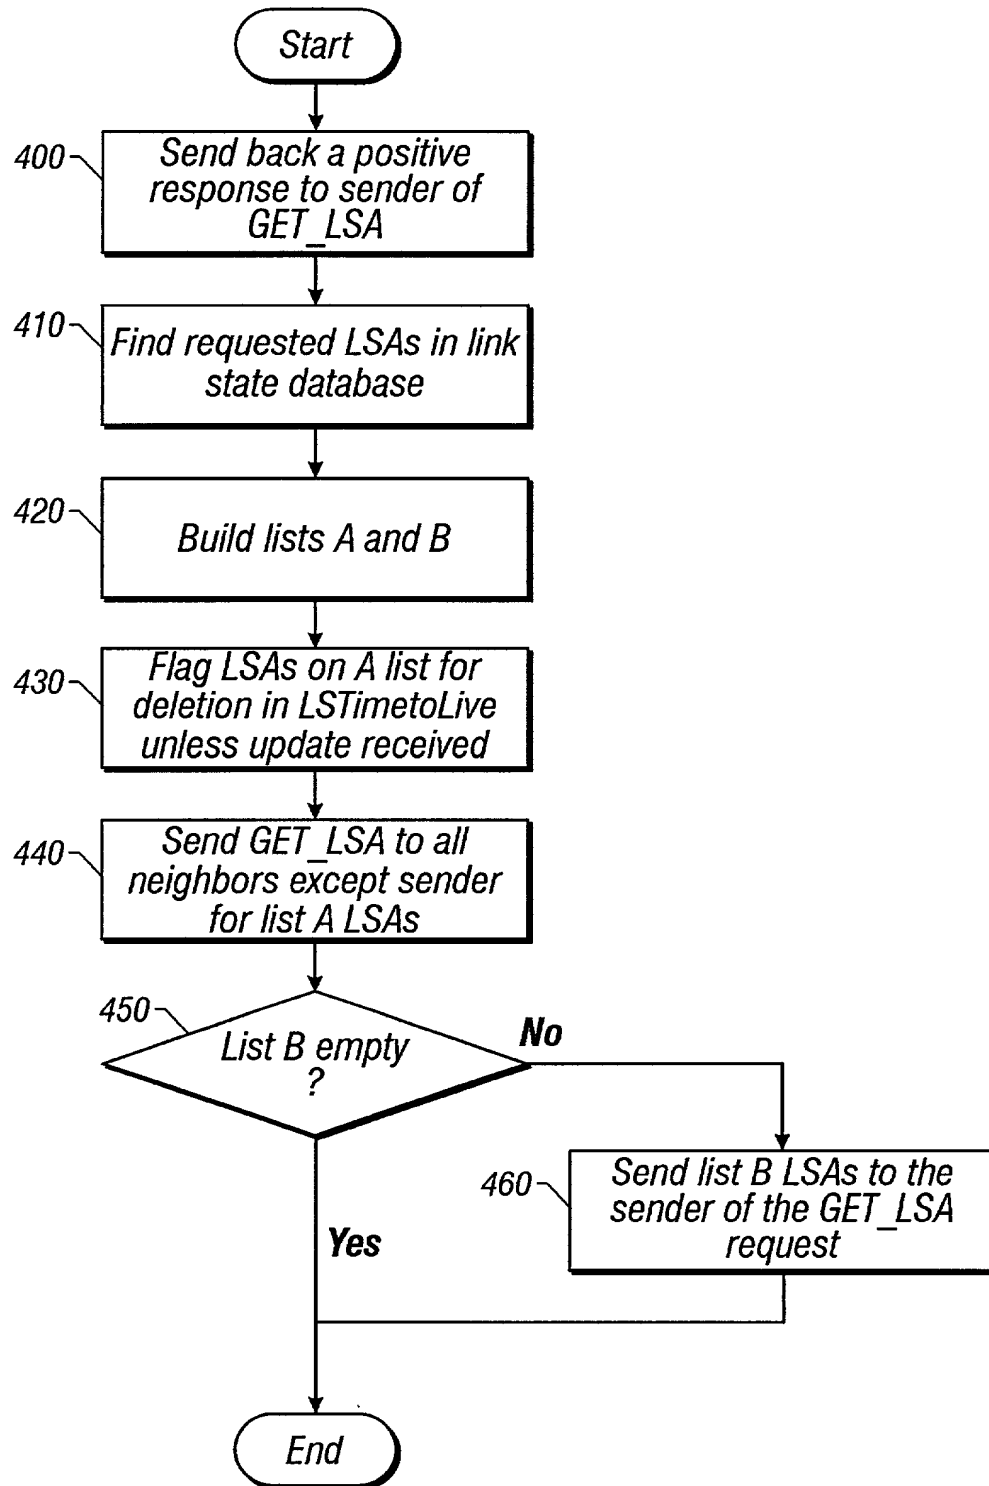


FIG. 4

5/23

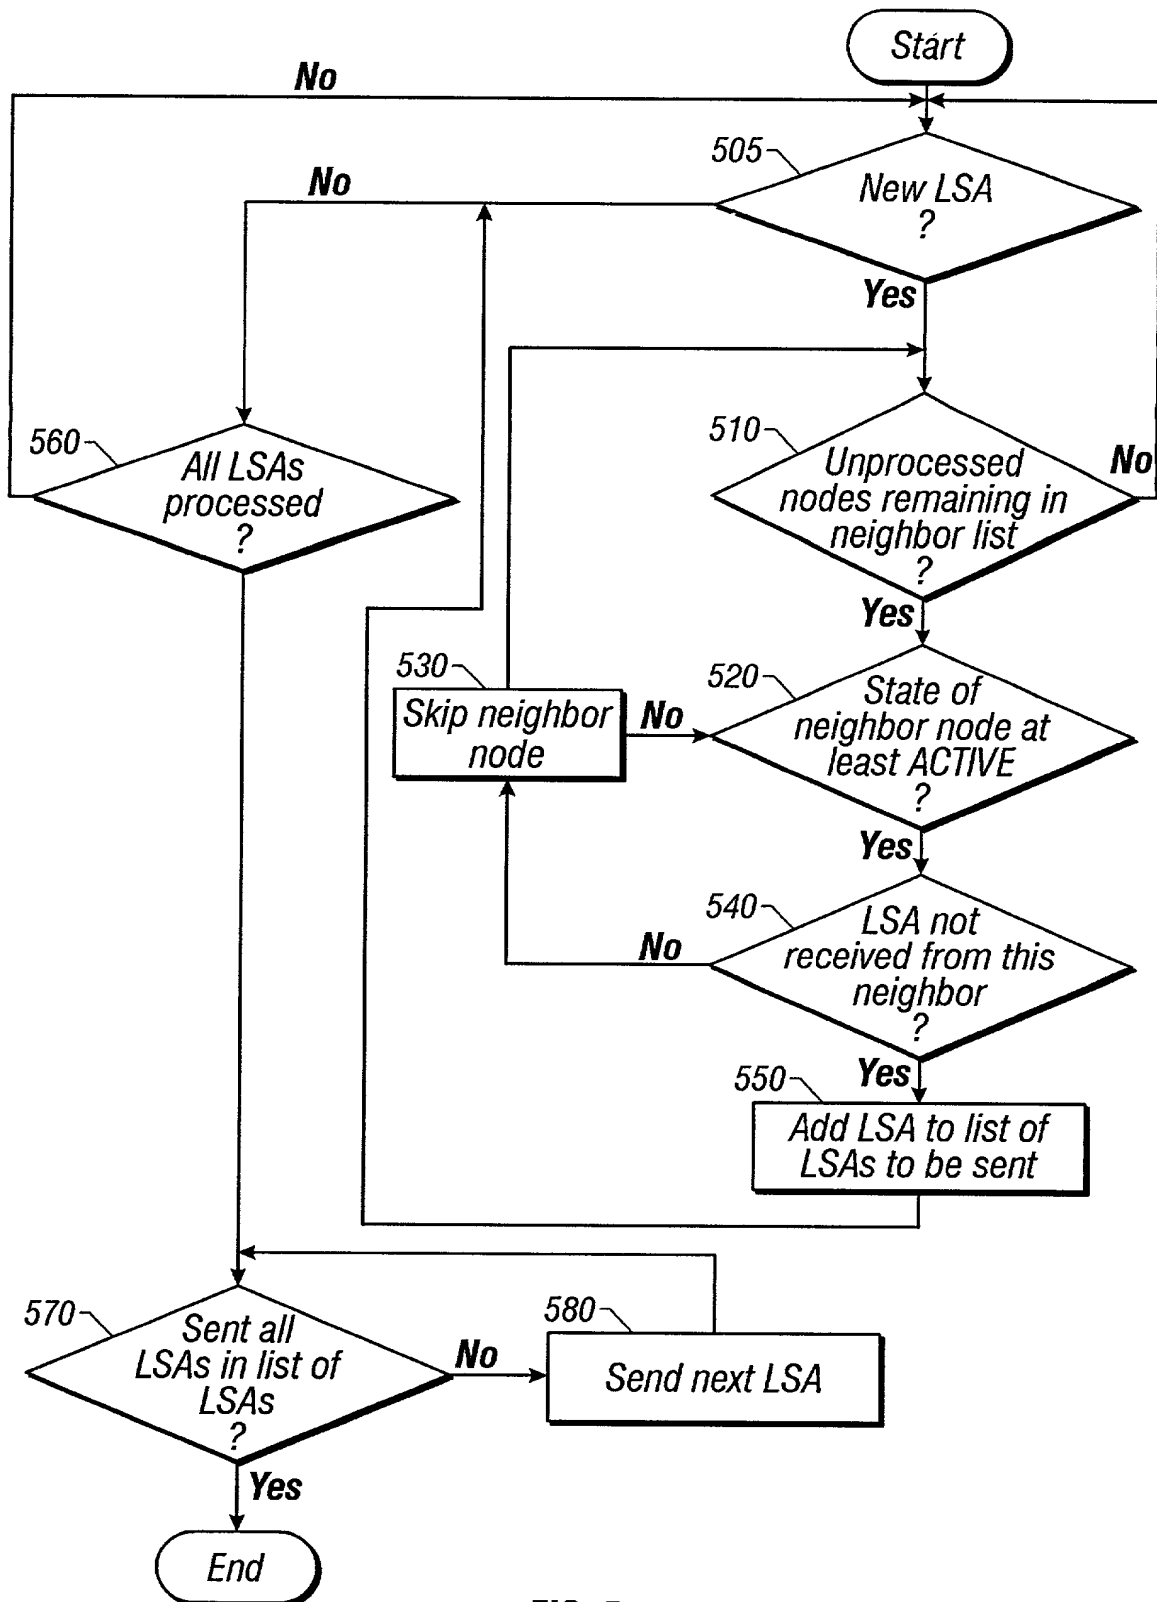


FIG. 5

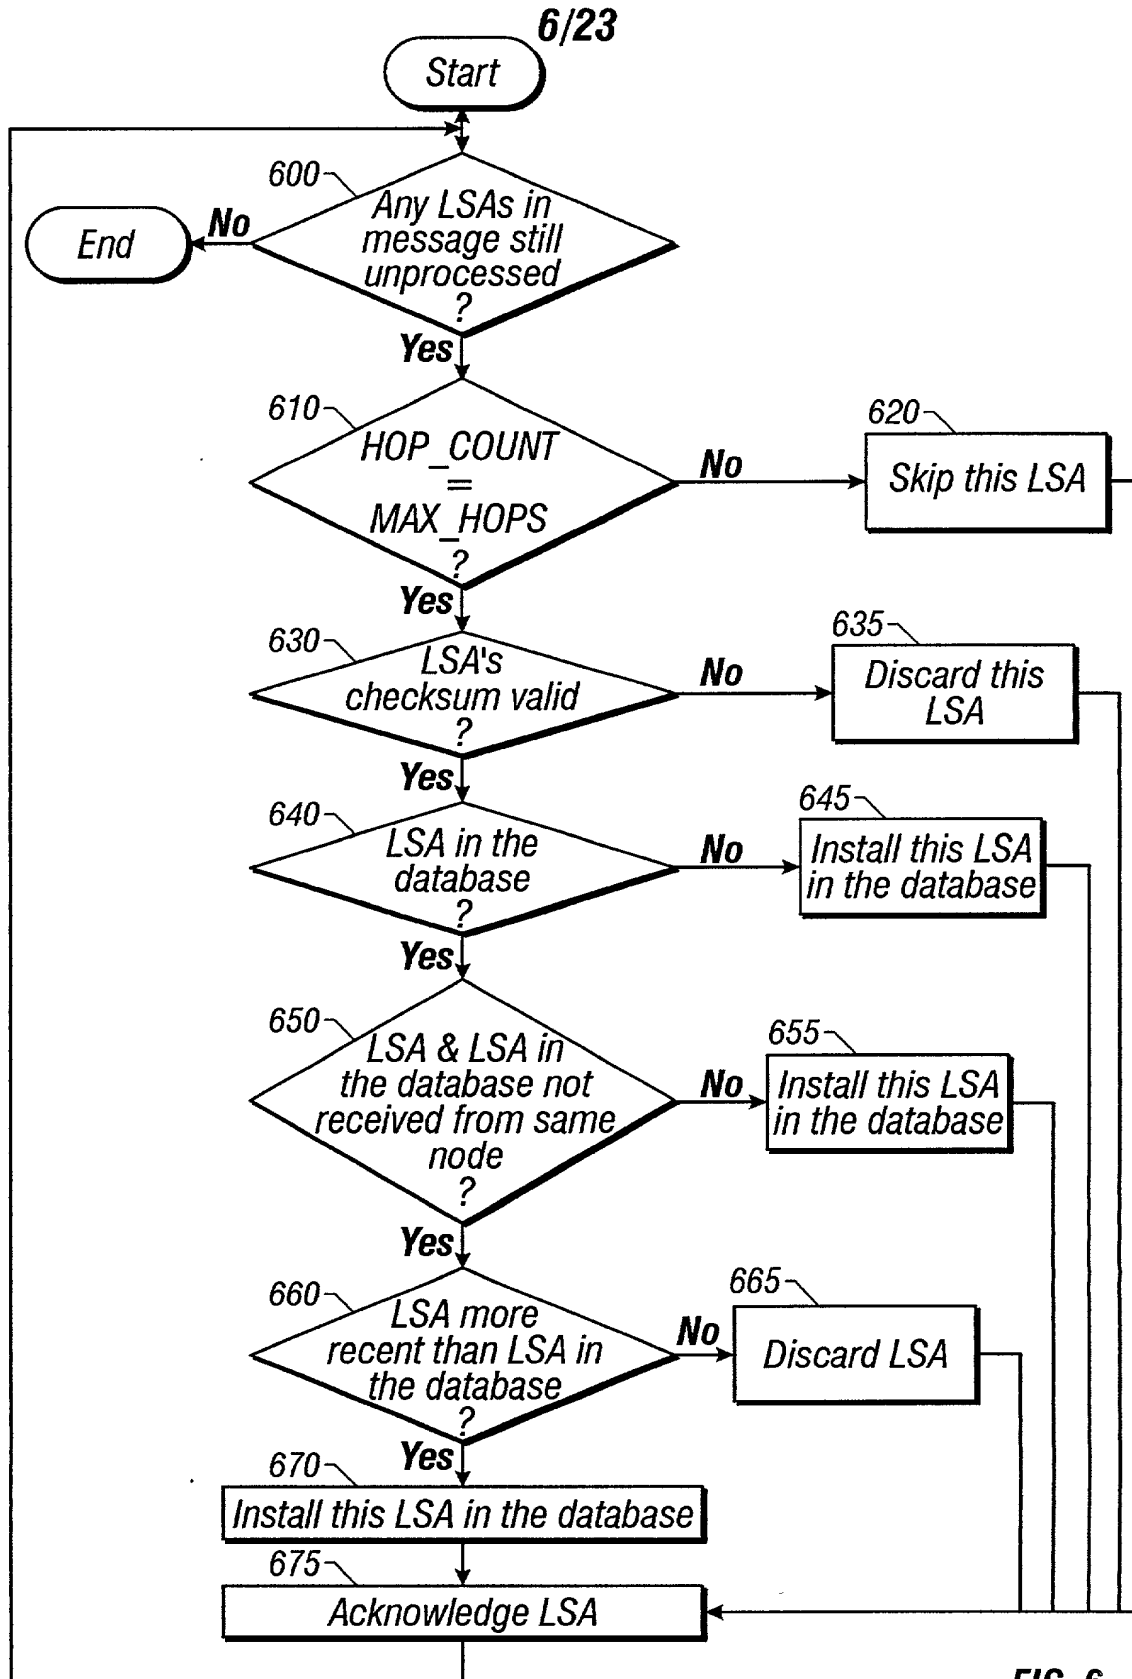


FIG. 6

7/23

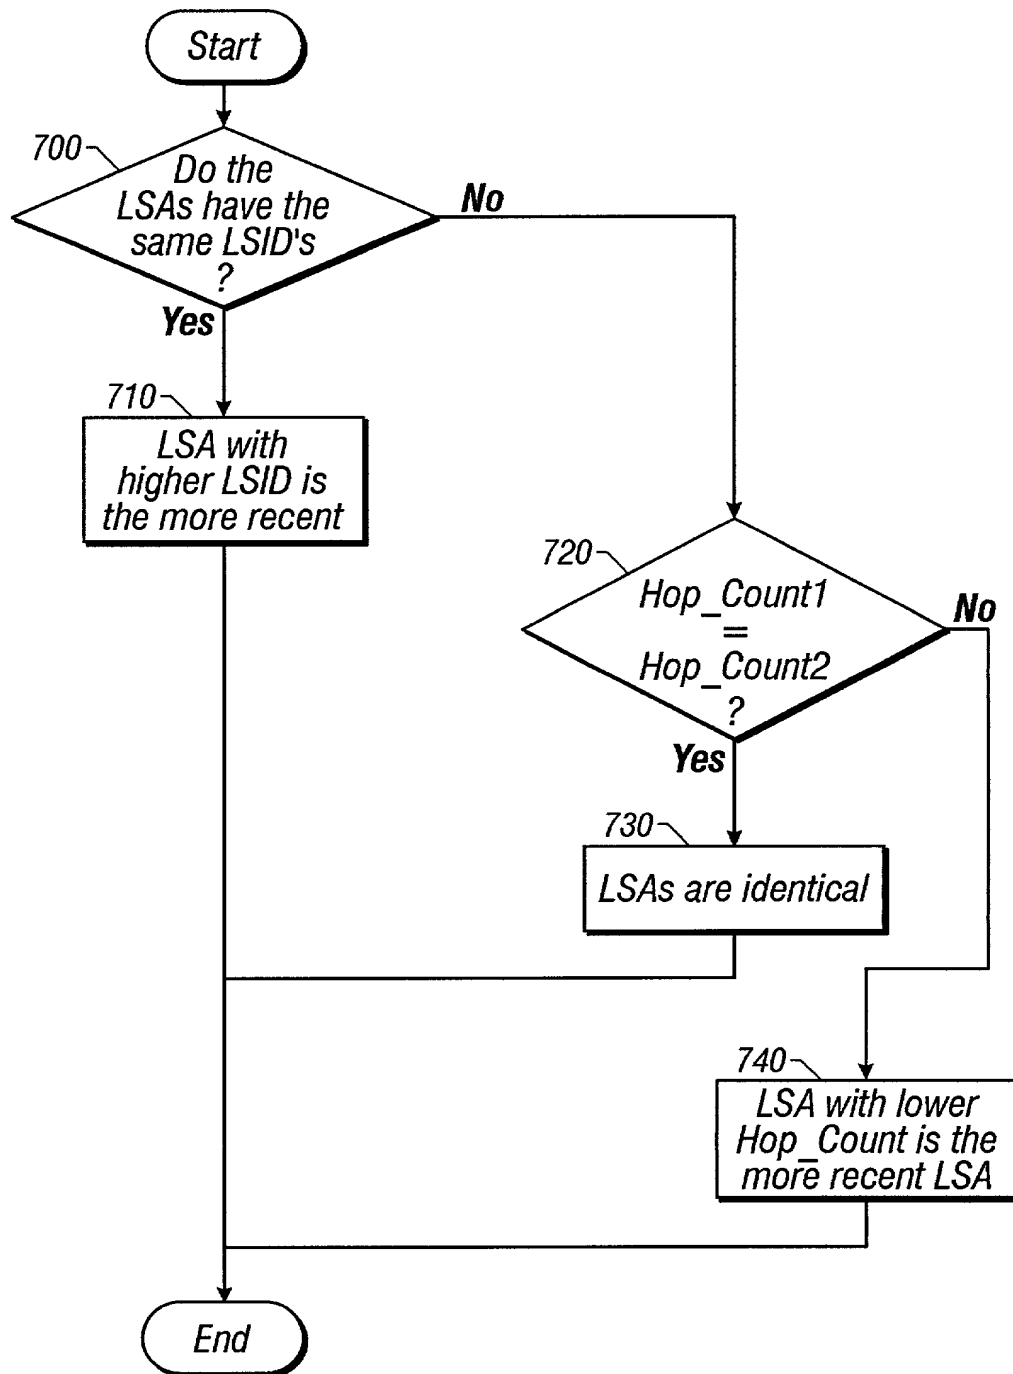


FIG. 7

8/23

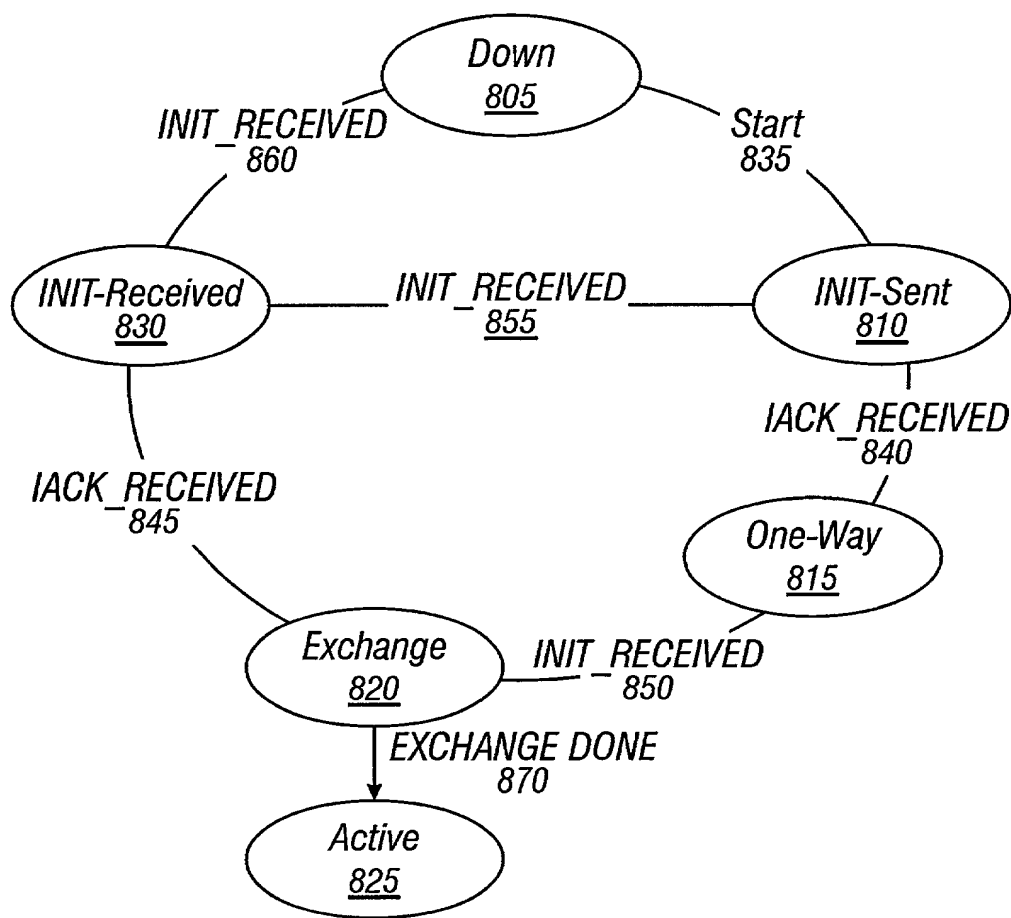


FIG. 8

9/23

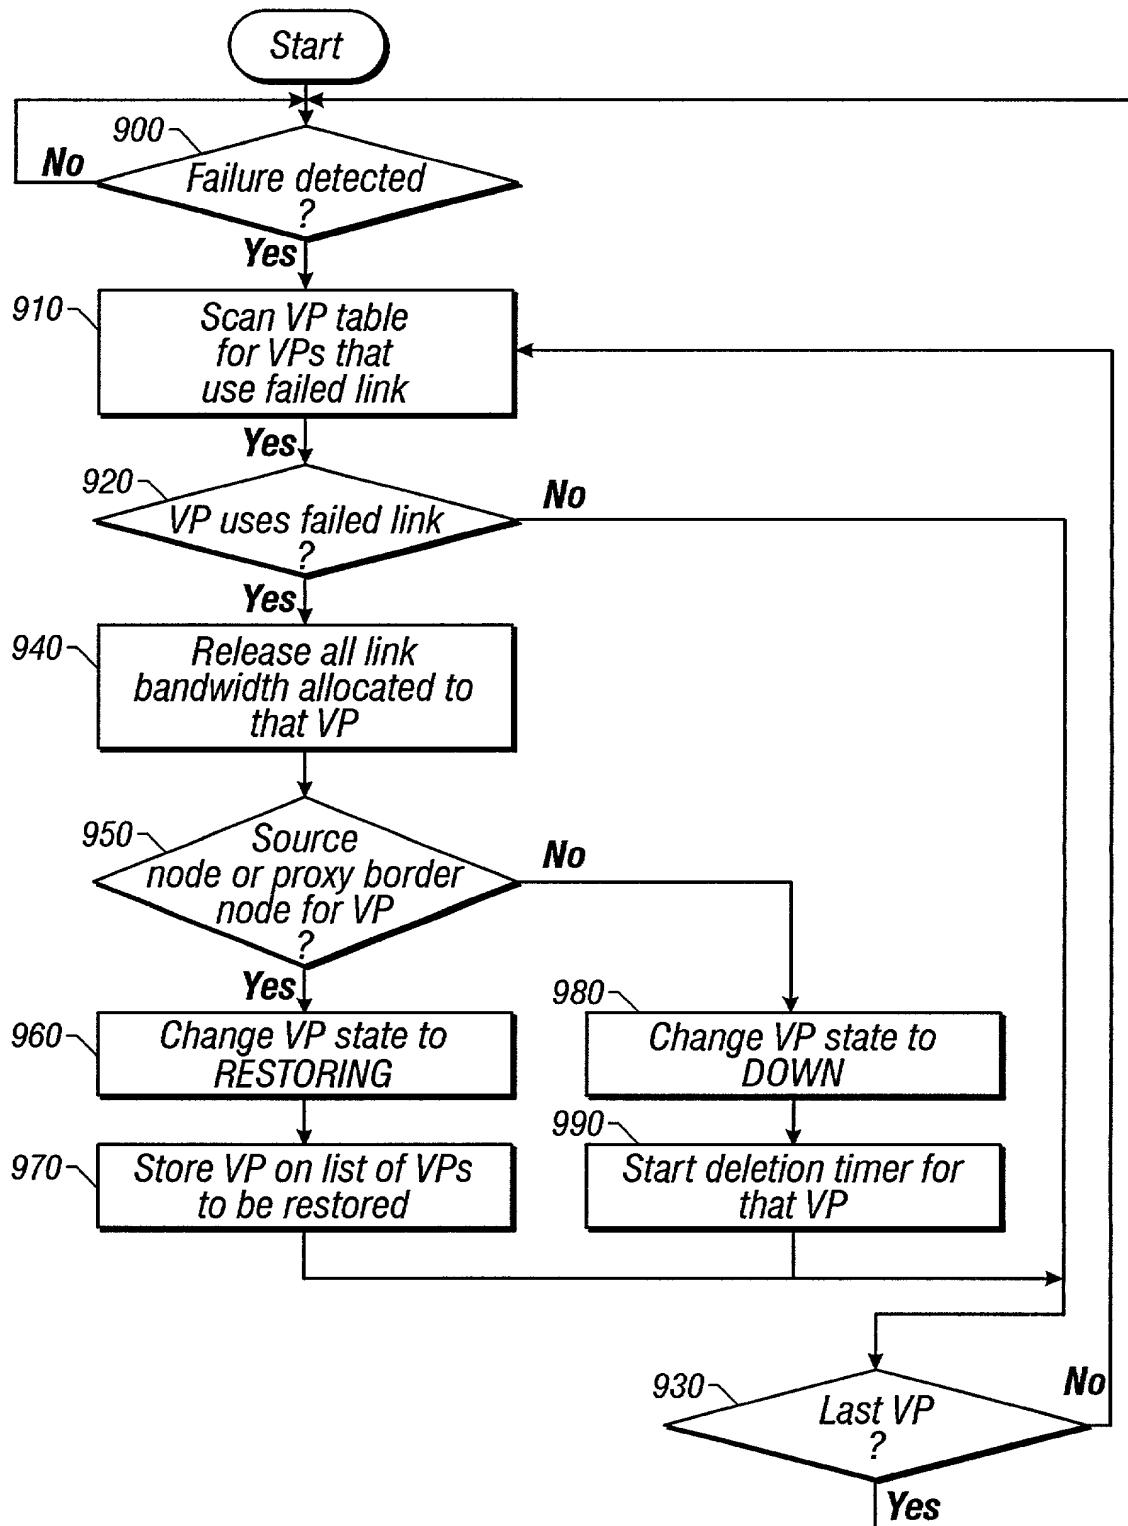


FIG. 9

10/23

10A	10B
-----	-----

FIG. 10

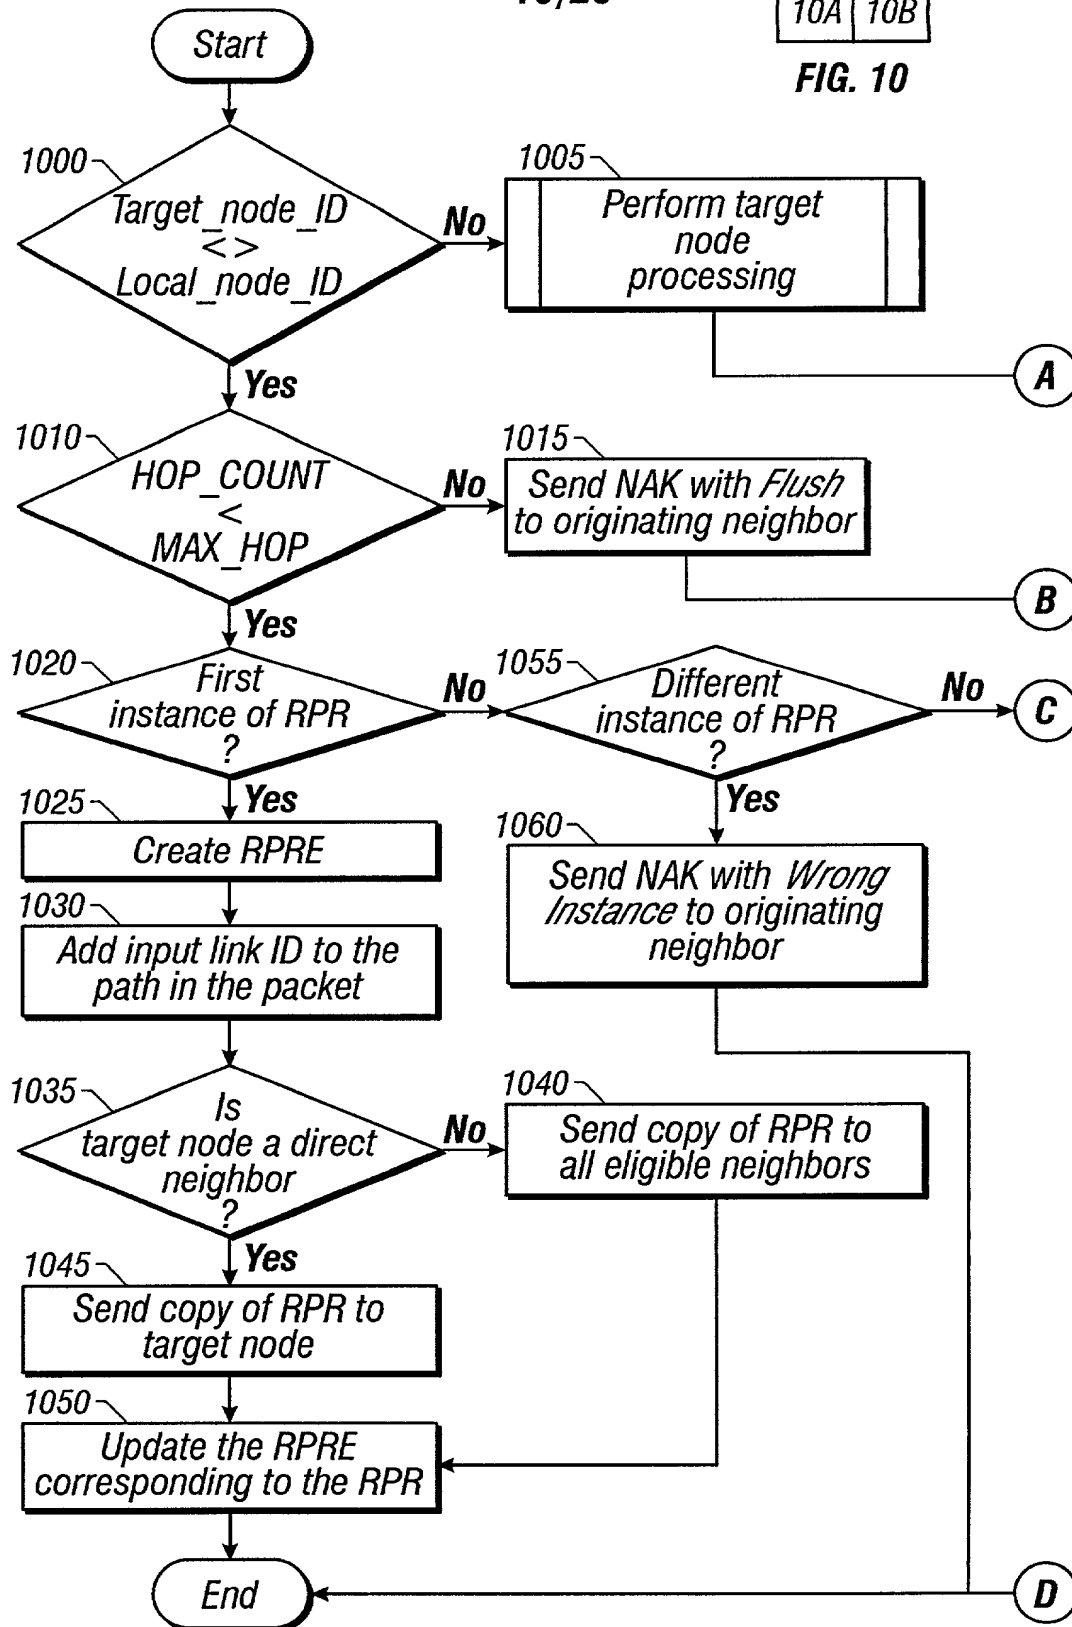


FIG. 10A

11/23


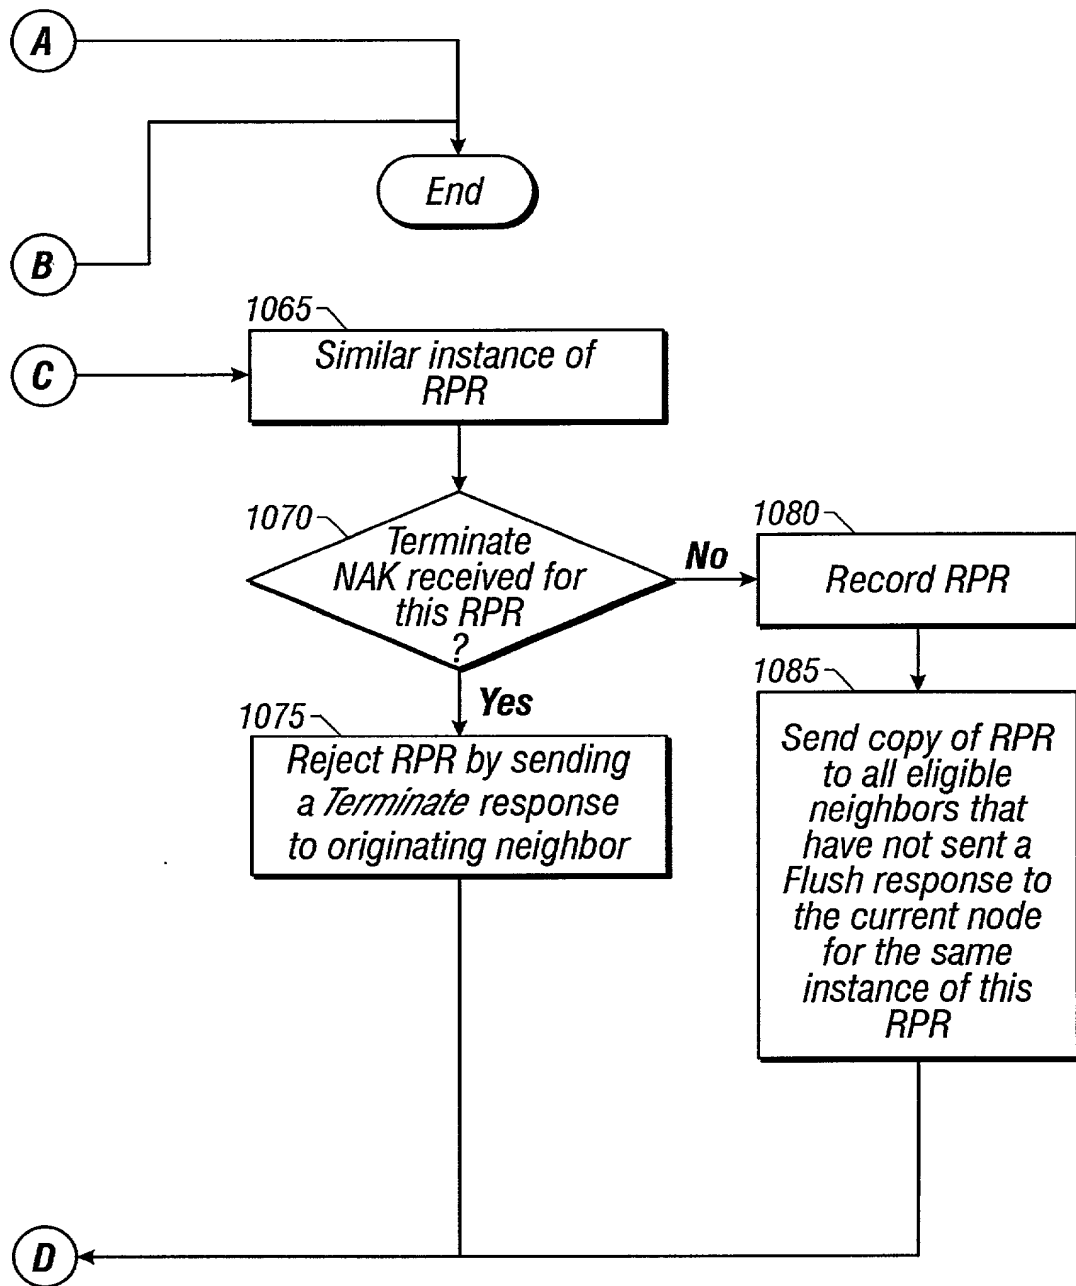


FIG. 10B


12/23

FIG. 11

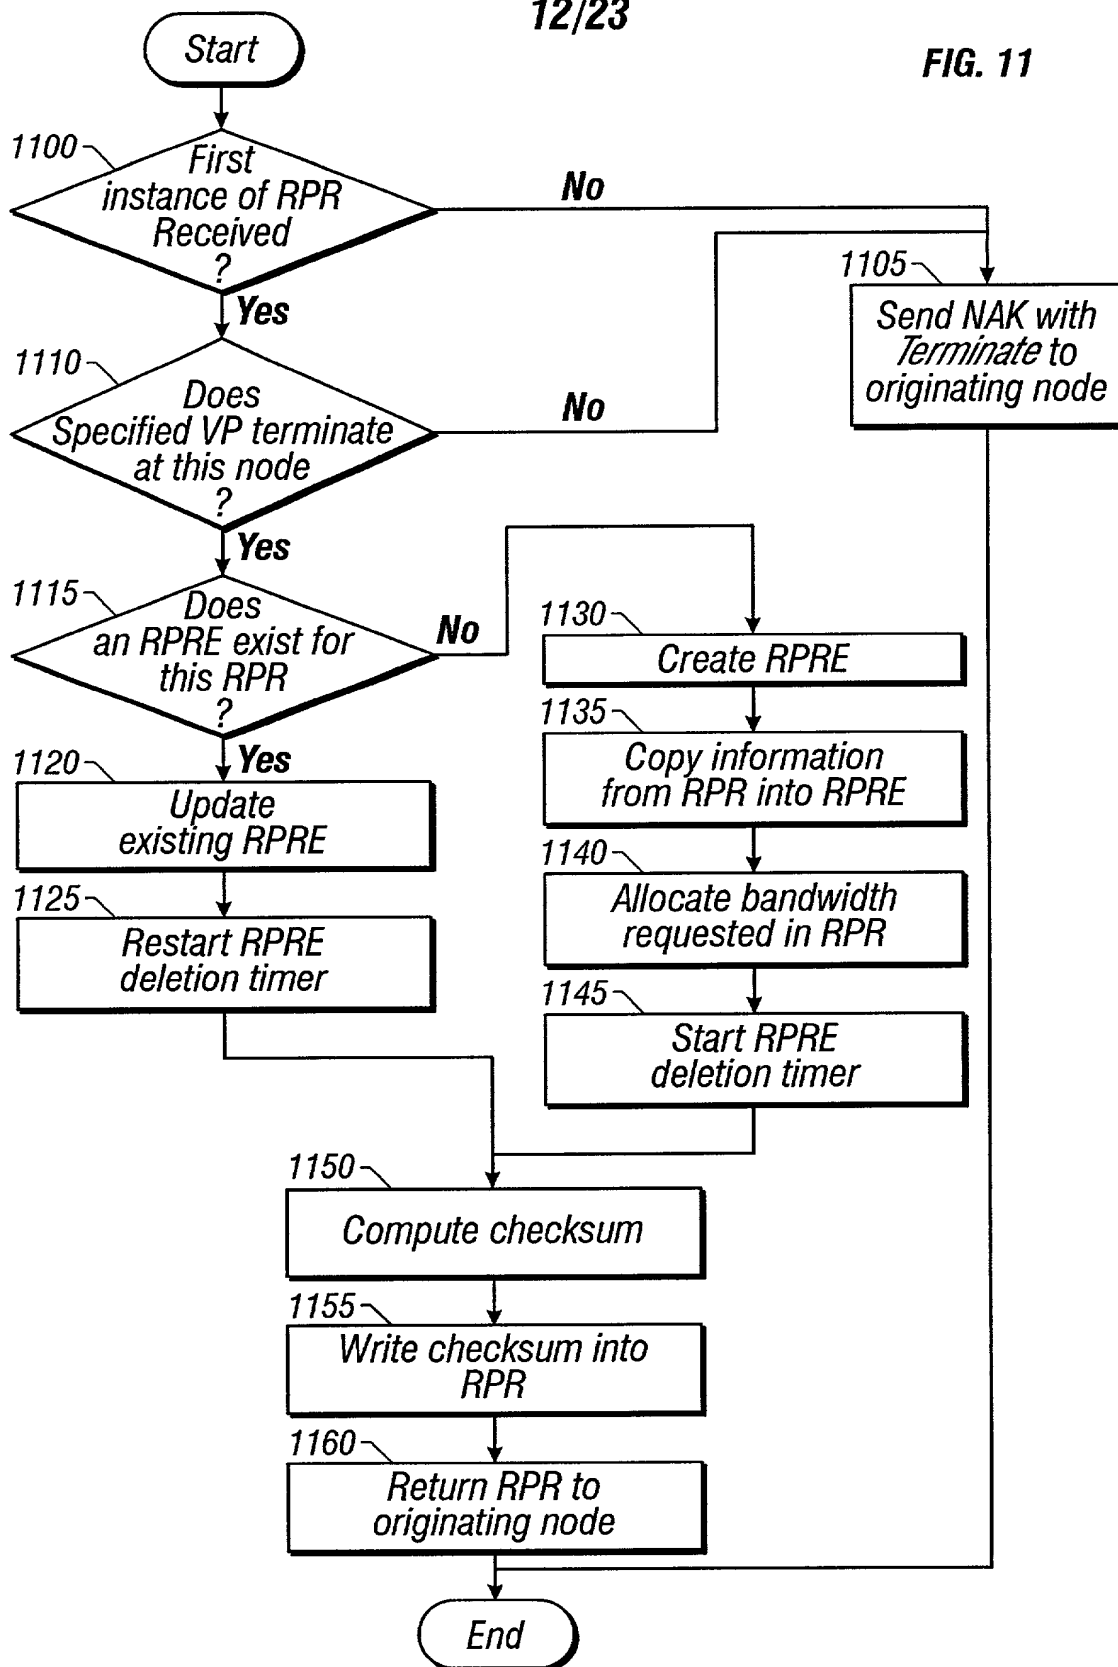

12A 12B

FIG. 12

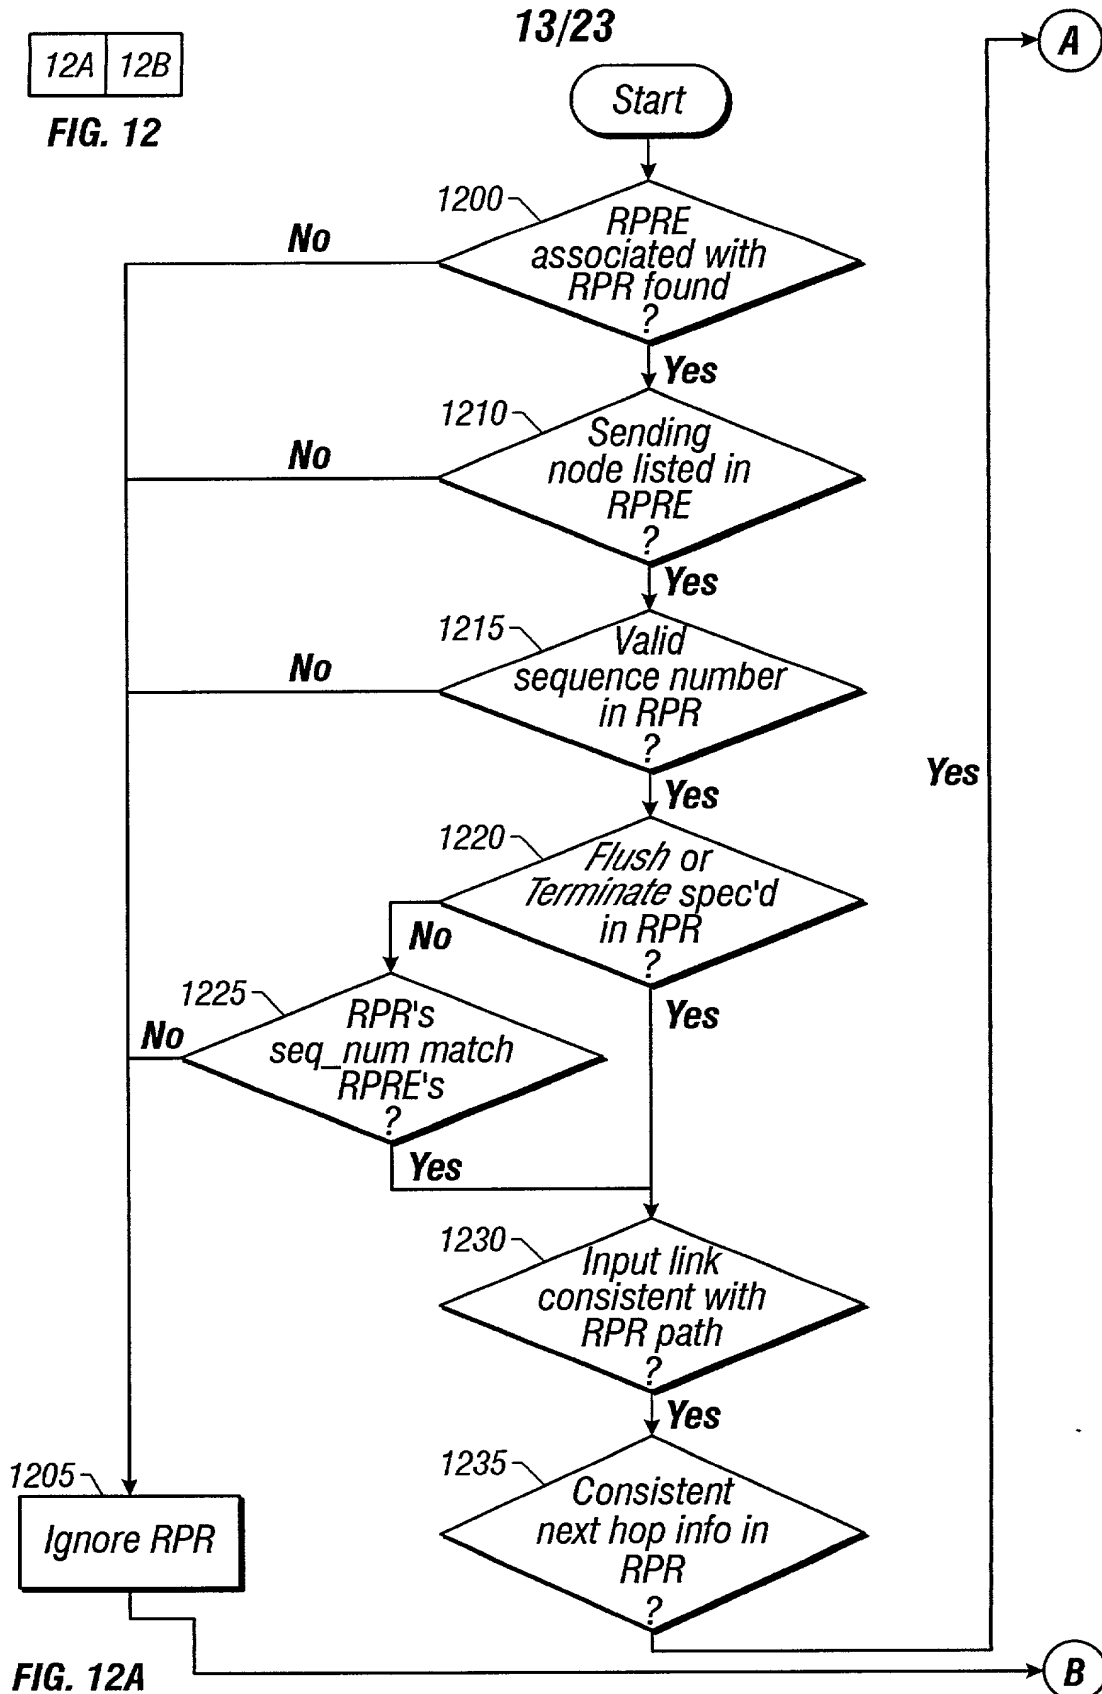

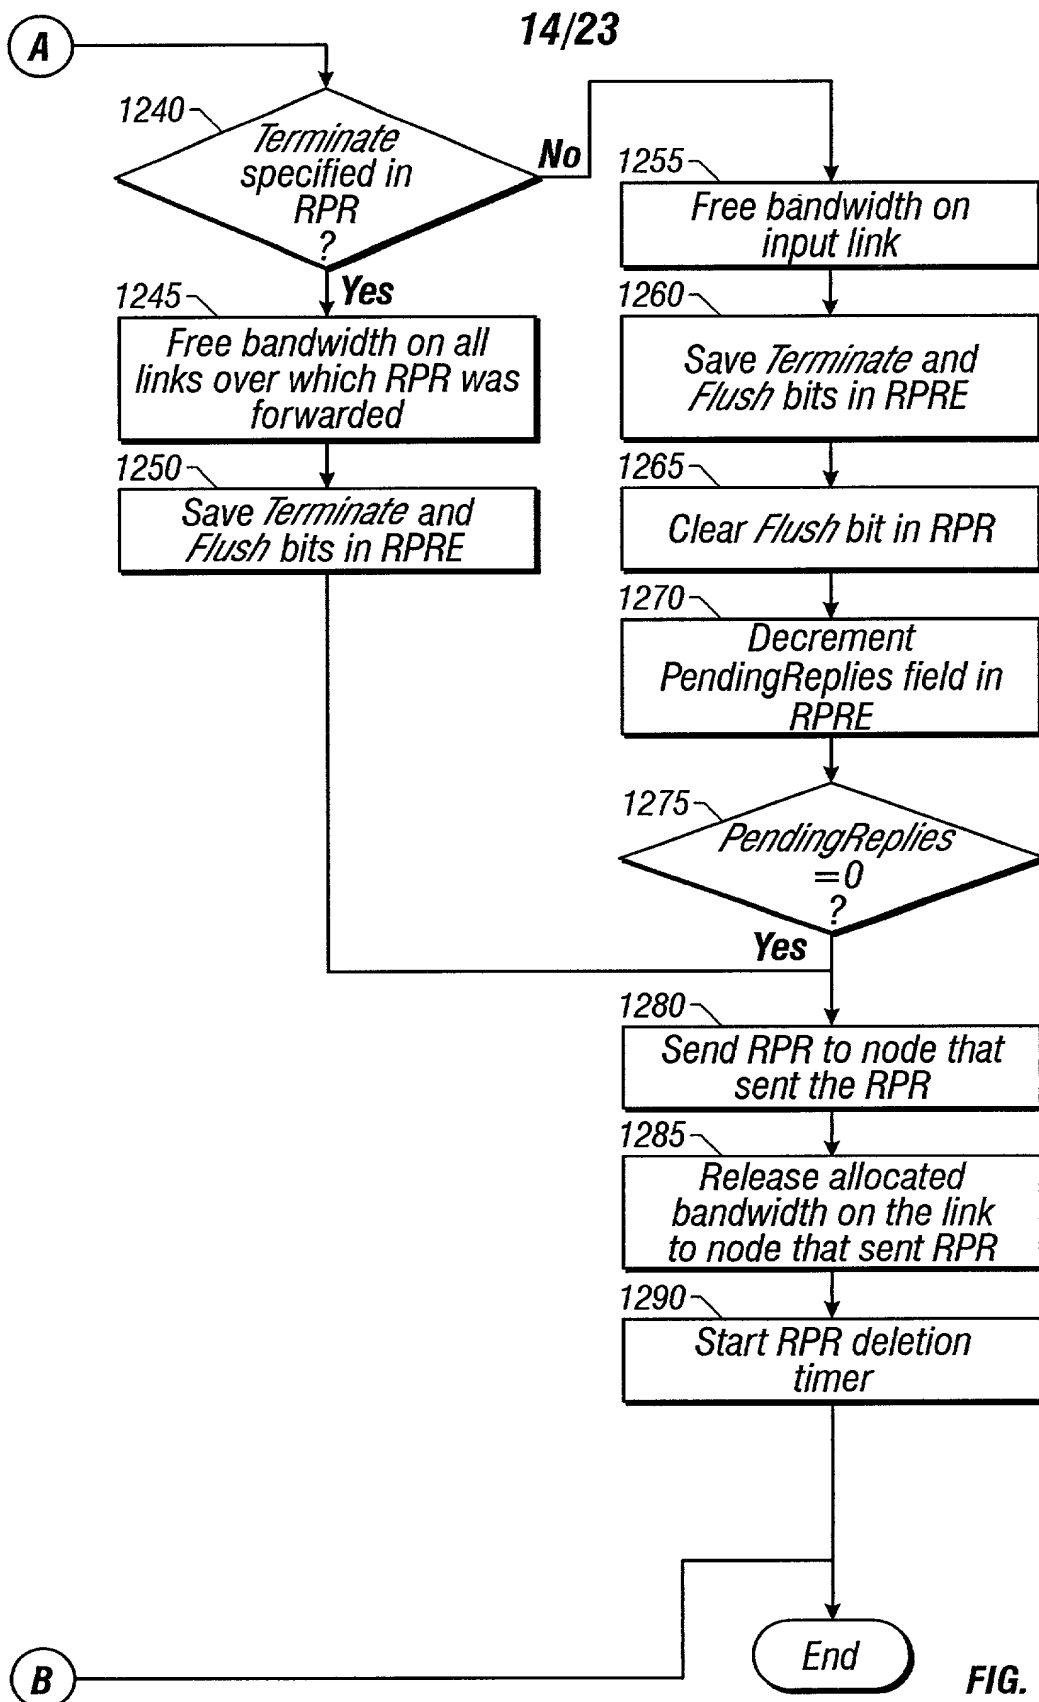


FIG. 12B

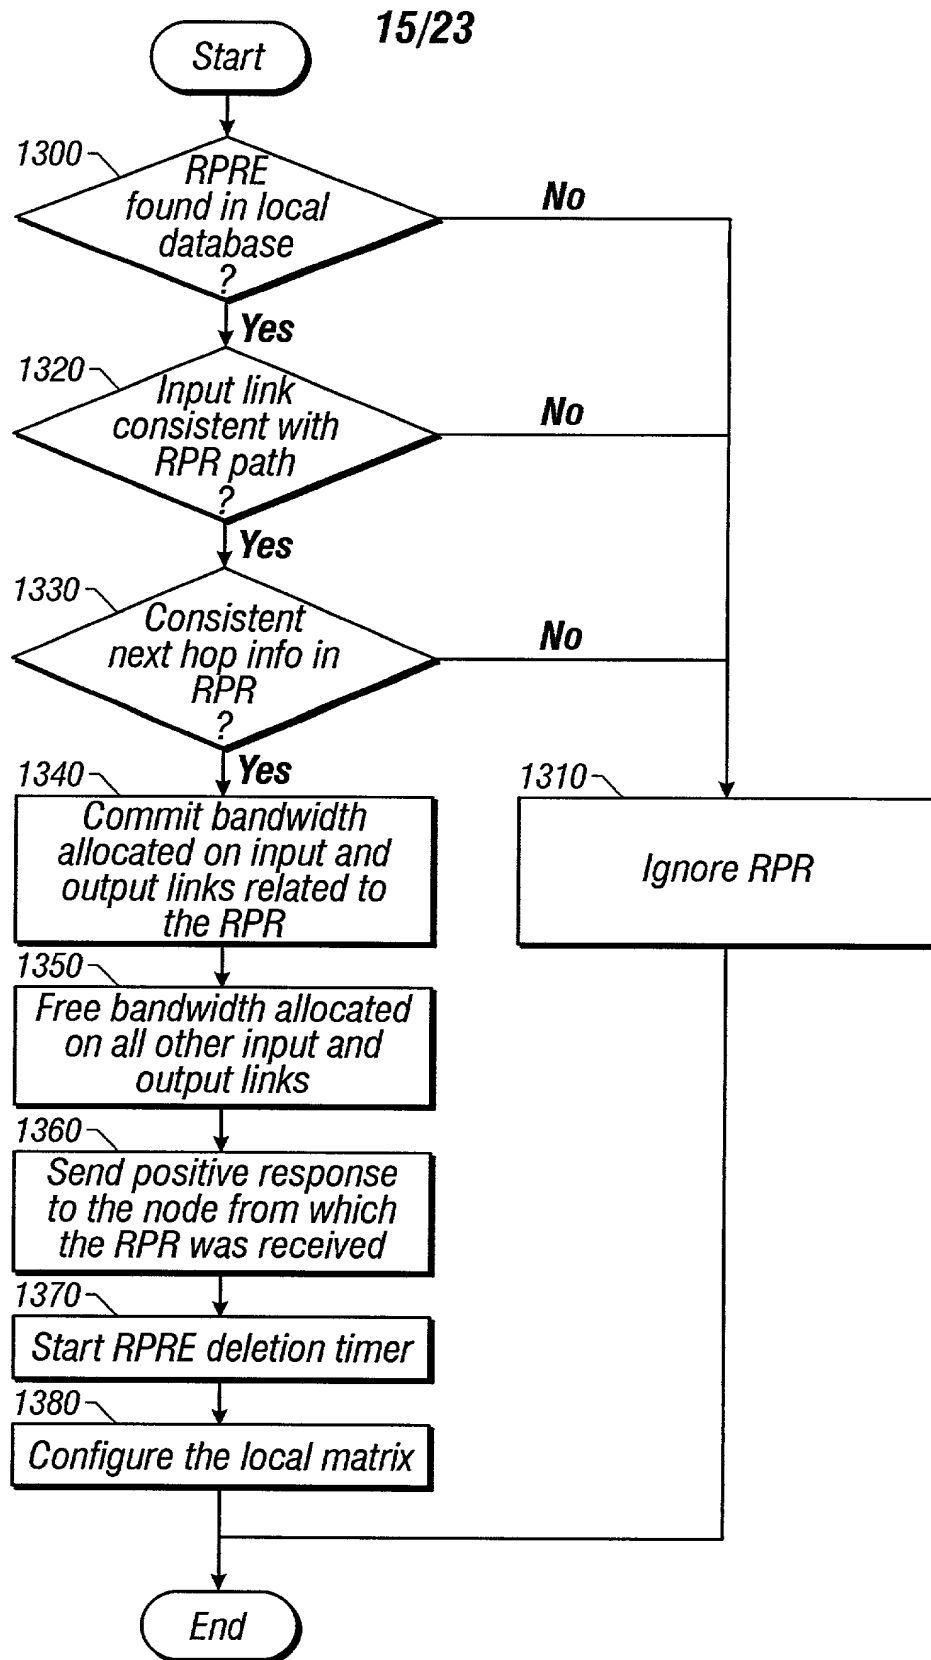


FIG. 13

16/23

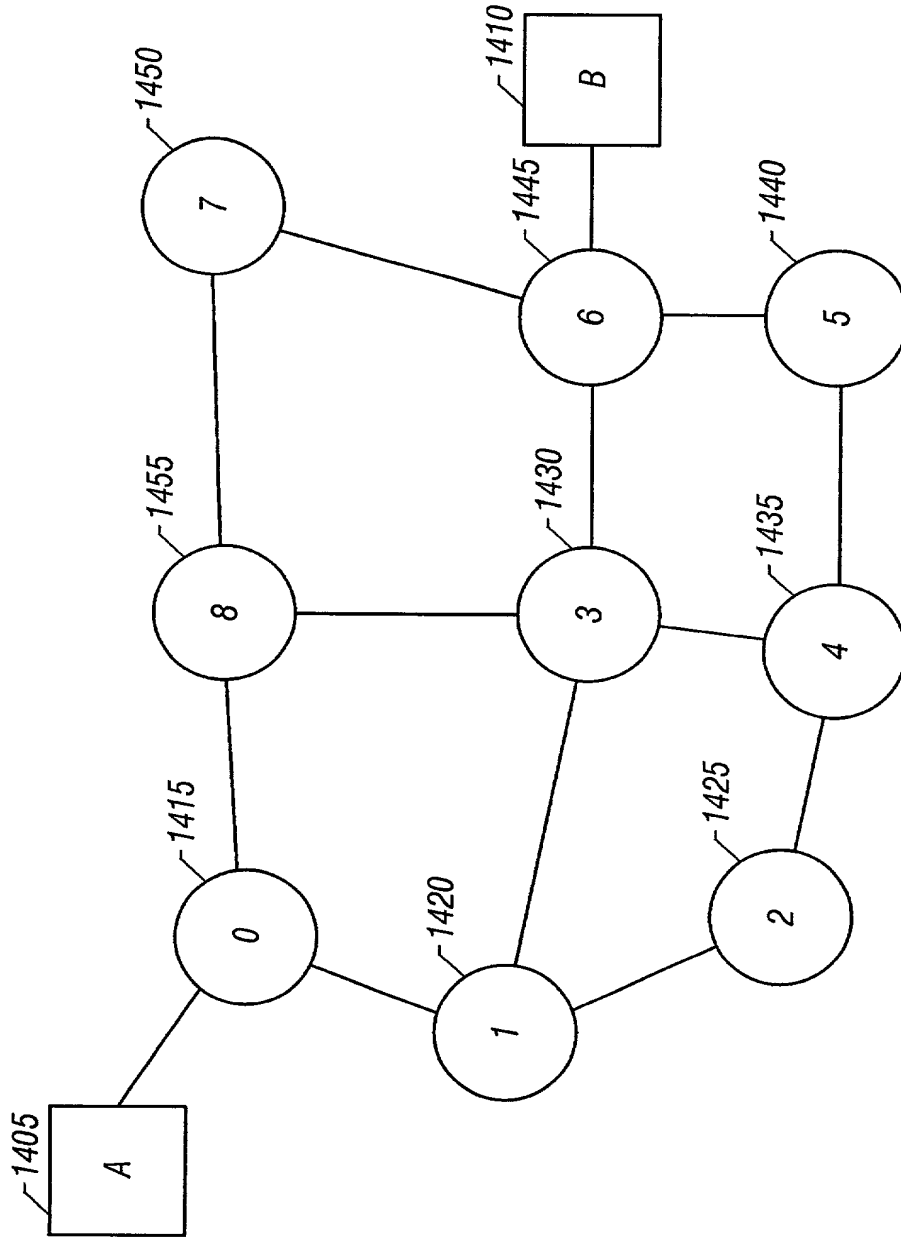


FIG. 14

17/23

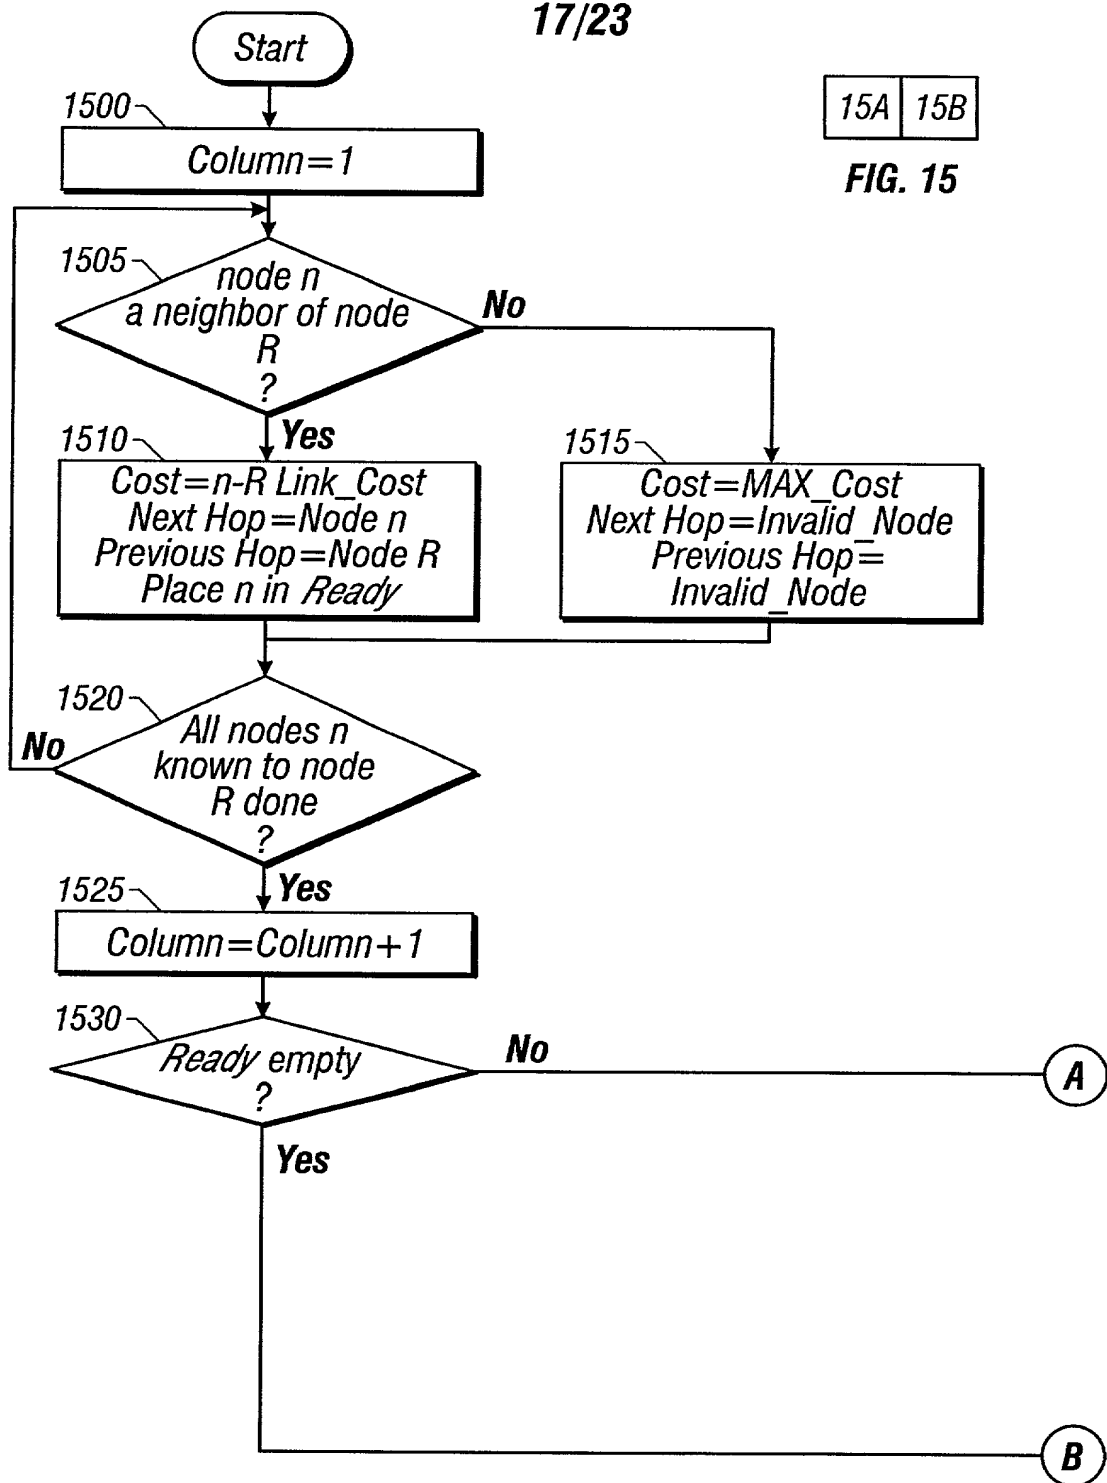


FIG. 15A

18/23

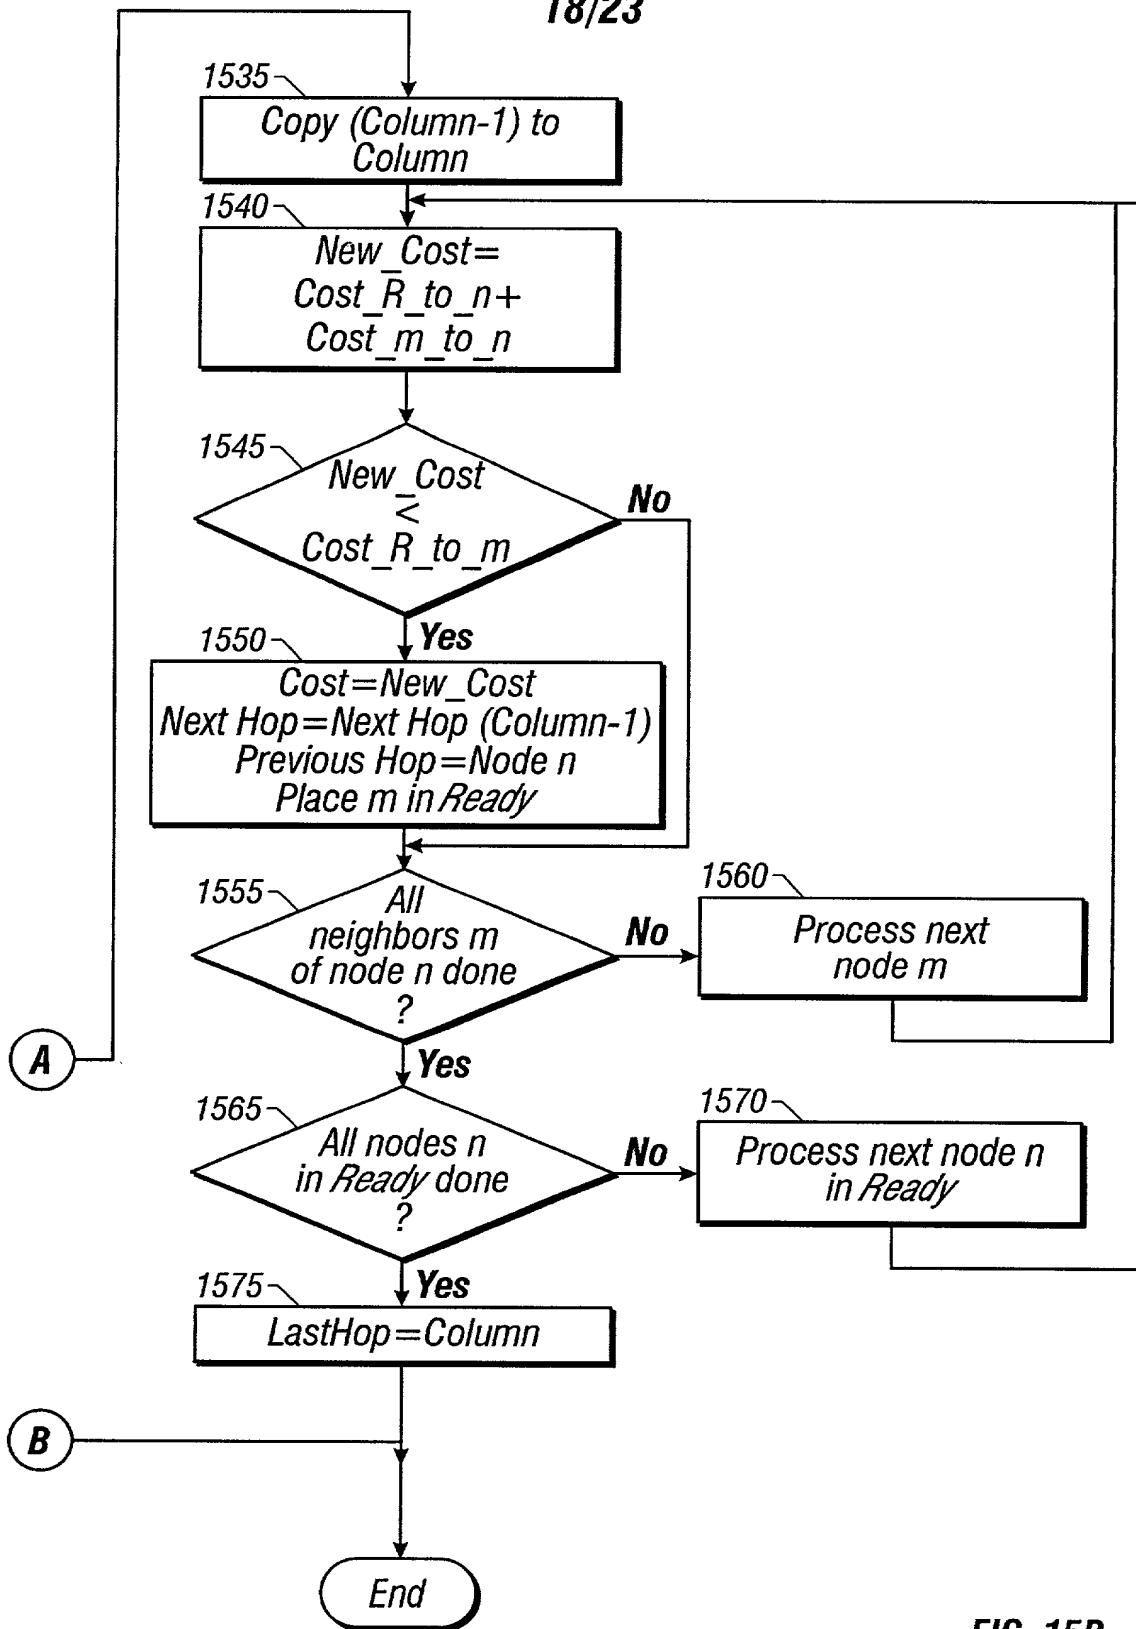


FIG. 15B

19/23

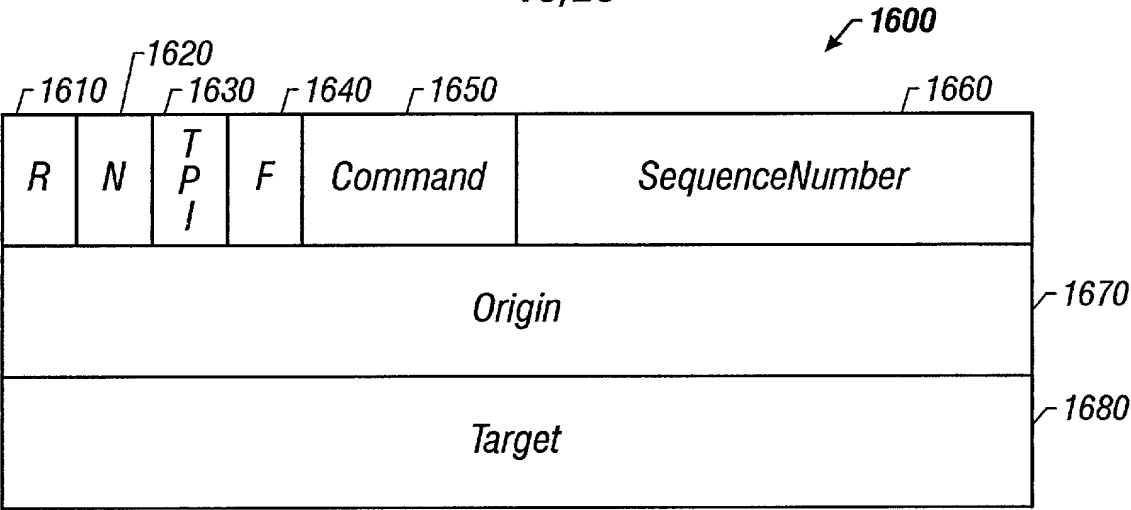


FIG. 16

Diagram 1700 shows a table with the following parameters and identifiers:

NodeID	<u>1710</u>
LinkCost	<u>1720</u>
QoS3Capacity	<u>1730</u>
QoS4Capacity	<u>1740</u>
HelloInterval	<u>1750</u>
TimeoutInterval	<u>1760</u>

FIG. 17

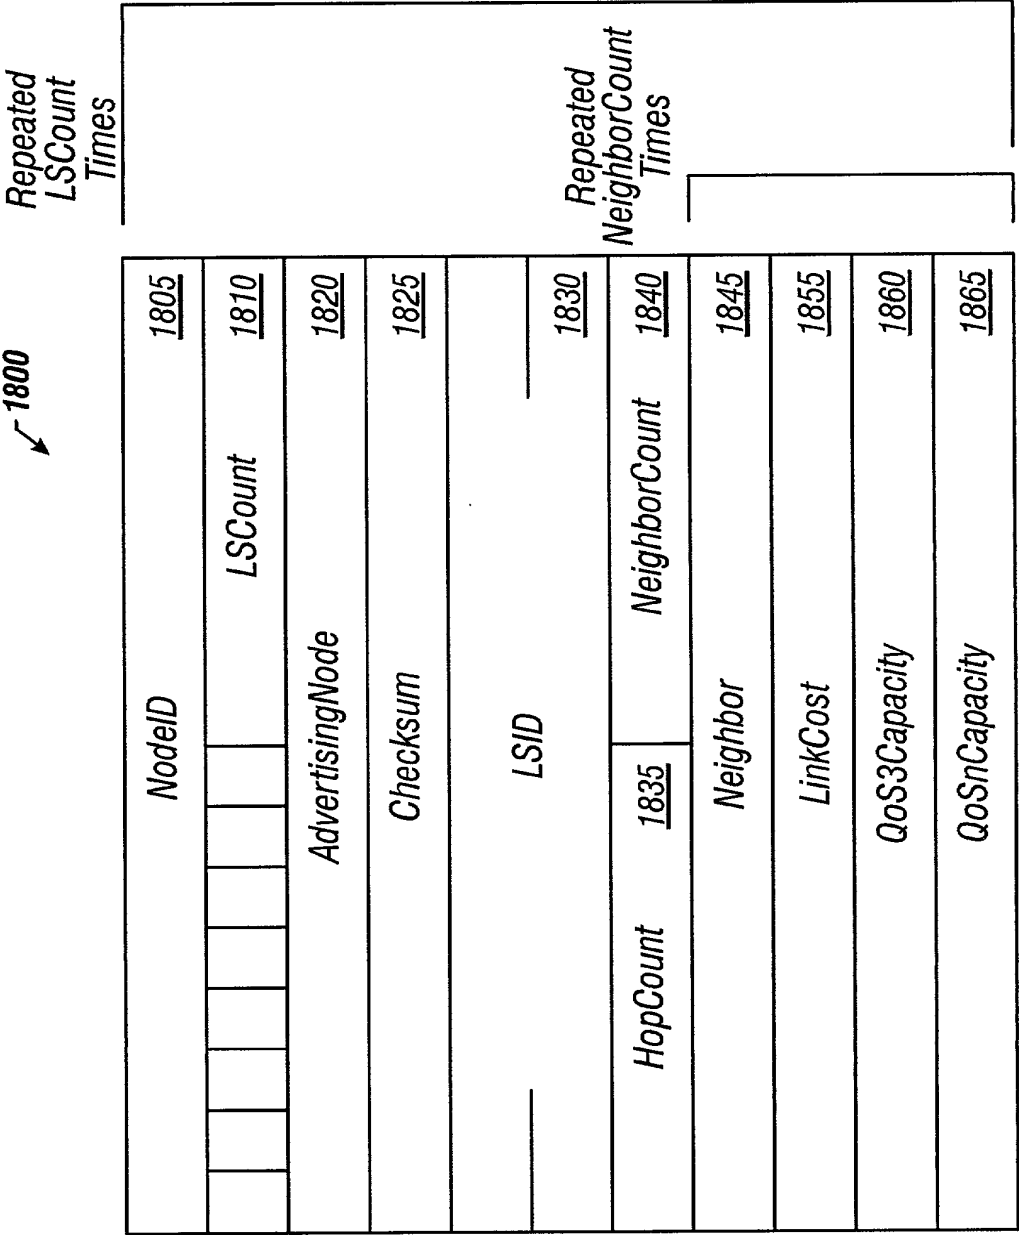


FIG. 18

1900

Zero-byte	1905	LSA count	1910
Node ID		1930(1)	
Node ID		1930(2)	
Node ID		1930(N-1)	
Node ID		1930(N)	

FIG. 19

22/23

↙ 2000

VPID		<u>2010</u>	Path 2050
Checksum		<u>2020</u>	
PathLength	<u>2030</u>	HopCount	
Hop		<u>2060(1)</u>	
Hop		<u>2060(2)</u>	
Hop		<u>2060(N)</u>	

FIG. 20

↙ 2100

VPID		<u>2110</u>
Checksum		<u>2121</u>
PathLength	<u>2130</u>	HopCount <u>2140</u>
Hop		<u>2160(1)</u>
Hop		<u>2160(2)</u>
Hop		<u>2160(N)</u>

Path
┌ 2150

FIG. 21